

DF02.01.01
Operation Manual
for Mainframe Support Frame

RELATED VIDEO

*You can check TS500101 Installation guide from this video:
<https://youtu.be/WLujRyuZIAA>



Email: service@topskyfurniture.com
Phone Number: +1 725-333-1988

Warranty

ABOUT TOPSKY 3 YEAR WARRANTY:

TOPSKY product come with 3-year warranty from the date of purchase. Any failure/function issues from normal usage will be replaced free of charge or refund once within one year of the date of purchase. A failure is a mechanical breakdown of or defect in the unit that affects the user's ability to operate the product as intended.

WARRANTY COVERAGE:

All the parts

NOT INCLUDE:

Installation on non-standing desk legs

Installation on other sizes of desk legs

Misuse or abuse of the product

Customers personal preference changed

Normal appearance loss

Parts lost by customer

TOPSKY Accessories/Replacement Part For out of Warranty Paid Service.

We also offer paid service/parts and extend warranty for the part out of Warranty.

If exceed quality warranty period, or you have already performed a warranty service once during the period, and still want to be able to perform the warranty service.

If you ever have any inquiry's regarding whether or not your product is still under warranty/ how to buy extra part, paid service

Just search and contact TOPSKY service team or call us.

 
BOM

15 min



Assembling time



Two people



Tools

  


NO	Part name	Qty(PCS)	NO	Part name	Qty(PCS)
1	Bracket Plate	X1	8	Upper Clamp65x45	X1
2	Under Clamp80x50	X1	9	Adjustment Plate	X1
3	Under Clamp75x45	X1	10	Thumb Screw	X1
4	Under Clamp65x45	X1	11	M6×16 Screw	X6
5	Adjustment Bracket	X1	12	Cushion Pad	X2
6	Upper Clamp80x50	X1	13	Upper protective pad	X1
7	Upper Clamp75x45	X1	14	Under protective pad	X1

Installation Instruction


STEP 1

- According to the height dimensions of the computer mainframe, the upper protective pad and under protective pad are tightly attached to the column and wraps the column. Cut off the excess length.

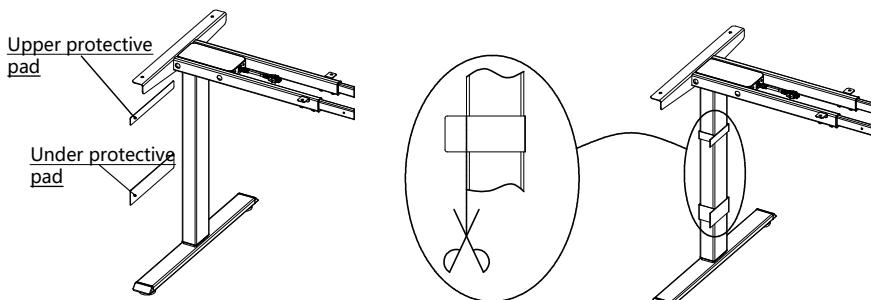

STEP 2

- Fix the under clamp and the bracket plate together with the under protective pad. After tightening with the M6×16 screws, attach the cushion pads to prevent the screws from damaging the computer mainframe.

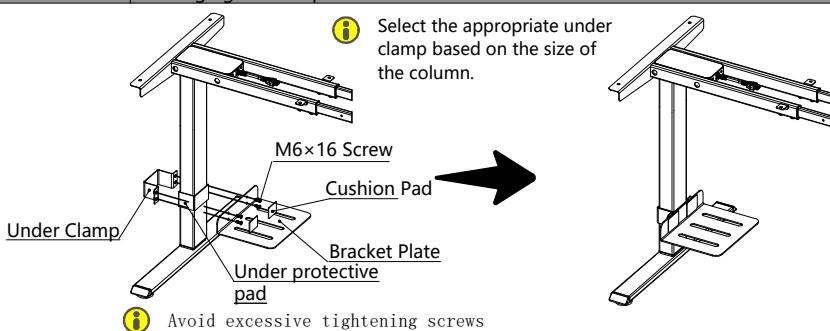

STEP 3

- According to the illustration, first place the computer mainframe on the bracket plate. Fix the upper clamp and the adjustment bracket together with the upper protective pad. Tightening with the M6×16 screws.
- Place the adjustment plate beneath the adjustment bracket, adjust it to the appropriate position, and then tighten the thumb screw.

